


Cell Box

QUICK START

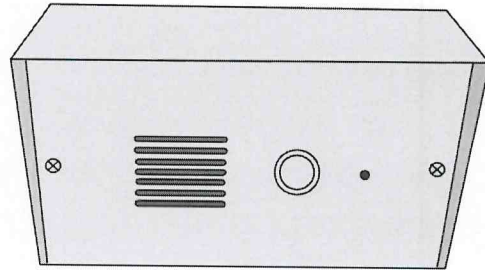

Bft U.S. Inc
6100 Broken Sound Pkwy
Suite 14
Boca Raton, FL 33487

Phone: 561.995.8155
U.S. Toll free: 877.995.8155
info@bft-usa.com
www.bft-usa.com

PROGRAMMING CHART

FOR PROGRAMMING	TEXT TO SEND	RANGE	DEFAULT
CHANGE PASSCODE	* 12 * (PASSCODE) # 01 (NEW PASSCODE) #	0000 - 9999	1234
ADD FIRST "CALL TO NUMBER"	* 12 * (PASSCODE) # 11 (PHONE NUMBER) #		
ADD SECOND "CALL TO NUMBER"	* 12 * (PASSCODE) # 12 (PHONE NUMBER) #		
ADD THIRD "CALL TO NUMBER"	* 12 * (PASSCODE) # 13 (PHONE NUMBER) #		
ADD USER PHONE NUMBER	* 12 * (PASSCODE) # 72 (PHONENUMBER) #		
DELETE USER PHONE NUMBER	* 12 * (PASSCODE) # 73 (PHONE NUMBER) #		
DELETE ALL USERS	* 12 * (PASSCODE) # 73 * #		
SET SPEAKER VOLUME	* 12 * (PASSCODE) # 3 (VOLUME LEVEL) #	0 - 4	3
SET MICROPHONE VOLUME	* 12 * (PASSCODE) # 4 (VOLUME LEVEL) #	0 - 4	3
SET RING TIME	* 12 * (PASSCODE) # 52 (NUMBER OF SECONDS) #	10 - 99	20
SET CALL TIME	* 12 * (PASSCODE) # 53 (NUMBER OF SECONDS) #	005 - 999	60
SET RELAY ACTIVATION KEY	* 12 * (PASSCODE) # 61 (KEYPAD BUTTON) #	0 - 9, *, #	*
SET AUX RELAY ACTIVATION KEY	* 12 * (PASSCODE) # 62 (KEYPAD BUTTON) #	0 - 9, *, #	#
SET COUNTRY CODE (IDD)	* 12 * (PASSCODE) # 71 (COUNTRY CODE) #	USA = 1	886
RESET FACTORY SETTINGS	* 12 * (PASSCODE) # 999 #		

INSTRUCTIONS



1. REMOVE AND DISCARD THE PLASTIC BACK COVER OF THE UNIT
2. WITHOUT BEING POWERED, CAREFULLY INSERT SIM CARD
3. CONNECT TO GATE OPERATOR OR DEVICE AS SHOWN IN THE DIAGRAM AND POWER UP. ANTENNA MUST BE CONNECTED
4. CHECK SIGNAL STRENGTH BY SENDING A TEXT MESSAGE (*20#). THE UNIT WILL REPLY INDICATING ITS SIGNAL LEVEL (1=WEAK; 4=STRONG)
5. PROGRAM THE UNIT BY SENDING TEXT MESSAGES. USE PROGRAMMING CHART BELOW AS REFERENCE

GLOSSARY

PASSCODE	4 DIGIT NUMBER THAT ALLOWS THE PERSON TEXTING TO MAKE CHANGES TO THE PROGRAMMING
CALL TO NUMBER	PHONE NUMBER THAT THE UNIT WILL DIAL WHEN THE BUTTON IS PRESSED
USER PHONE NUMBER	PHONE NUMBER SAVED IN THE SYSTEM'S MEMORY THAT WHEN CALL IS RECEIVED, THE UNIT WILL INSTANTANEOUSLY OPEN THE GATE. 100 USERS CAN BE SAVED IN MEMORY
RING TIME	NUMBER OF SECONDS THE PHONE WILL RING BEFORE ROLLING OVER TO NEXT "CALL TO NUMBER"
CALL TIME	NUMBER OF SECONDS OF THE COMPLETE CALL, BEGINNING FROM WHEN SYSTEM DIALS THE FIRST NUMBER
RELAY ACTIVATION KEY	KEY TO PRESS ON THE PHONE WHEN A CALL IS RECEIVED FROM THE UNIT IN ORDER TO OPEN THE GATE
COUNTRY CODE	DIAL OUT COUNTRY CODE (IDD). MUST BE SET TO THE INSTALLATION'S COUNTRY CODE TO ELIMINATE THE NEED TO DIAL "1" FOR CALLS WITHIN THE COUNTRY

WIRING DIAGRAM

