


# CONTROL BOARD QUICK PROGRAMMING



## NAVIGATING THROUGH THE MENUS:

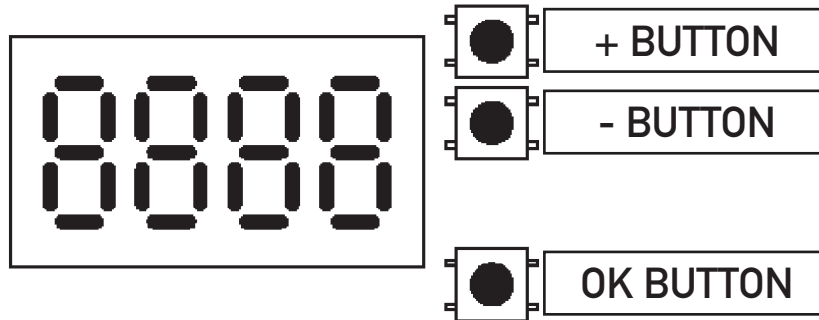

- The "OK" button is used for: switching on the display, confirming changes to the programming, entering the menus.
- The "+" button is used for: scrolling up the menus (go up in the menus as shown at page 14), increasing values.
- The "-" button is used for: scrolling down the menus (go down in the menus as shown at page 14), decreasing values.
- The "+" and "-" buttons pushed at the same time are used for: getting back one level in the menus, discarding changes to programming, exiting from the programming mode (turning off the display).

## ADDING TRANSMITTERS TO THE RECEIVER

1. Turn on the display (by pressing twice the "OK" button).
2. Scroll down ("- " button) to "Radio" menu and press "OK".
3. The display will show "Add Start". Press "OK".
4. The display will show "Hidden button". Press the hidden button of the transmitter you want to store as shown in Fig.12 & 13. See Note A and B
5. The display will show "Desired button". Press the button you want to activate the gate with as shown in Fig. 14.
6. The display will show "Add Start", repeat the procedure from step # 3 to install other transmitters.
7. Switch off the display by pressing "+" and "-" buttons at the same time twice.

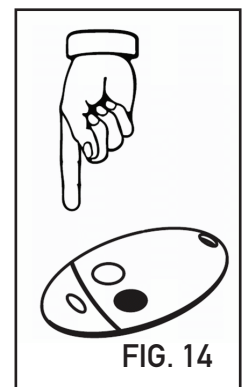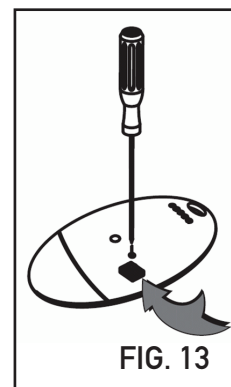

## Note

**A:** If your transmitter has rear access to a hidden button press it as shown in Figure 13.

**B:** If your transmitter does not have rear access to a hidden button press the two buttons in front of your transmitter as shown in Figure 12