

# TRANSMITTER PROGRAMMING INSTRUCTIONS

These instructions are applicable to Deimos Bt operators, Libra CLX, Libra UL R, Rigel 5, and Leo Control Boards



PARAi



LOGIC



rAdiD




Add StArt



Hidden bUttoN


Press and hold hidden button until the LCD displays "RELEASE"

OR  
If hidden button not provided, press and hold both buttons firmly until the LCD displays "RELEASE"

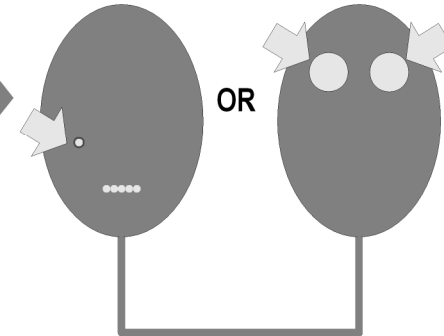

rELEASE

Press momentary the button you wish to operate the gate

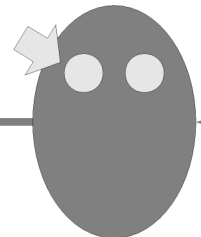

Number of transmitters in memory

0H 01

Transmitter programmed

Ho

Error: Transmitter not programmed

Press the + and - buttons at the same time twice to exit programming

